Panasonic

List of Compatible Device Models

Wireless Manager ME6.4

Wireless Manager mobile edition 6.4

- As of November 2017 -

In using this software, bear in mind that the items whose settings must be selected for the projectors and the functions that can be used may differ from one projector model to another. While referring to the table below, check out that projector models are compatible with the software before using them.

List of projector models

PT-DW530	3
PT-DX500	3
PT-DZ570	3
PT-F300NT	6
PT-FW300NT	6
PT-FW430	3
PT-FX400	3
PT-LB75NT	0
PT-LB80NT	0
PT-LB90NT	0
PT-LW80NT	0
PT-MW530	2
PT-MW630	2
PT-MZ570	2
PT-MZ670	2
PT-VW345N	8
PT-VW355N	5
PT-VW435N	7
PT-VW535N	5
PT-VW545N	4
PT-VX400NT	9
PT-VX415N	8
PT-VX425N	5
PT-VX505N	7
PT-VX605N	5
PT-VX615N	4
PT-VZ575N	5
DT V/ZEOEN	

PT-MZ670 / PT-MW630 / PT-MZ570 / PT-MW530

Alphabet letters are omitted from the end of the above product numbers because the specifications are common regardless of whether the alphabet letters are included.

* Alphabet letters at end (place of destination: A/AT/(blank), Lens: L/(blank))

O: Possible X: Not possible

Function		Compatibility
	[SIMPLE] connection	0
	[S-DIRECT] connection/[M-DIRECT] connection	O *1
	[S-MAP] connection	×
Connection method/Control	[USER] connection	0
	[1-4] connection	X *2
	[IP designation] connection	0
	[USB display] connection	×
	Live mode *3	0
	Multi-Live mode *3	X *4
	Moderator Mode *3	0
Compatible functions	Multiple unit live mode *3	0
	Browser remote control	0
	WEB control	0
	Content Manager	×

^{*1:} Only M-DIRECT connection can be used.

Limitations of use with software not installed

^{*2:} Only infrastructure mode can be used.

^{*3:} PC audio can only be output from the projector in "Live mode".

However, it is necessary to install this software (driver) on the PC.

Audio cannot be output in "Multi-Live mode"/"Moderator Mode"/"Multiple unit live mode".

^{*4:} Multi live mode is not supported, but moderator mode is available to function in its place.

PT-DZ570 / PT-DW530 / PT-DX500 PT-FW430 / PT-FX400

A wireless module, purchased separately, is required when connecting any of the above models using a wireless LAN. It is not required when connecting one of the above models using a wired LAN.

Furthermore, alphabet letters are omitted from the end of the above product numbers because the specifications are common regardless of whether the alphabet letters are included.

* Alphabet letters at end (place of destination: E/EA/U/(blank))

O: Possible X: Not possible

	Function	Compatibility
	[SIMPLE] connection	×
	[S-DIRECT] connection/[M-DIRECT] connection	×
	[S-MAP] connection	0
Connection method/Control	[USER1] to [USER2] connection	0
	[1-4] connection	0
	[IP designation] connection	0
	[USB display] connection	×
	Live mode *1	0
	Multi-Live mode *1	0
	Moderator Mode *1	×
Compatible functions	Multiple unit live mode *1	0
	Browser remote control	×
	WEB control	0
	Content Manager	×

^{*1:} PC audio can only be output from the projector in "Live mode".

However, it is necessary to install this software (driver) on the PC.

Audio cannot be output in "Multi-Live mode"/"Moderator Mode"/"Multiple unit live mode".

Limitations of use with software not installed

PT-VZ585N / PT-VW545N / PT-VX615N

Alphabet letters are omitted from the end of the above product numbers because the specifications are common regardless of whether the alphabet letters are included.

* Alphabet letters at end (place of destination: D/J/T/(blank))

O: Possible X: Not possible

Function		Compatibility
	[SIMPLE] connection	0
	[S-DIRECT] connection/[M-DIRECT] connection	O *1
	[S-MAP] connection	×
Connection method/Control	[USER] connection	0
	[1-4] connection	X *2
	[IP designation] connection	0
	[USB display] connection	○ *3
	Live mode *4	0
	Multi-Live mode *4	X *5
	Moderator Mode *4	0
Compatible functions	Multiple unit live mode *4	0
	Browser remote control	0
	WEB control	0
	Content Manager	×

^{*1:} Only M-DIRECT connection can be used.

Limitations of use with software not installed

^{*2:} Only infrastructure mode can be used.

^{*3:} A USB cable is required for this connection.

^{*4:} PC audio can only be output from the projector in "Live mode".

However, it is necessary to install this software (driver) on the PC.

Audio cannot be output in "Multi-Live mode"/"Moderator Mode"/"Multiple unit live mode".

^{*5:} Multi live mode is not supported, but moderator mode is available to function in its place.

■PT-VW355N / PT-VX425N ■PT-VZ575N / PT-VW535N / PT-VX605N

Alphabet letters are omitted from the end of the above product numbers because the specifications are common regardless of whether the alphabet letters are included.

* Alphabet letters at end (place of destination: D/J/T/(blank))

O: Possible X: Not possible

Function		Compatibility
	[SIMPLE] connection	0
	[S-DIRECT] connection/[M-DIRECT] connection	0
	[S-MAP] connection	×
Connection method/Control	[USER1] to [USER2] connection	O *1
	[1-4] connection	X *1
	[IP designation] connection	0
	[USB display] connection	○ *2
	Live mode *3	0
	Multi-Live mode *3	0
	Moderator Mode *3	×
Compatible functions	Multiple unit live mode *3	0
	Browser remote control	0
	WEB control	0
	Content Manager	×

^{*1:} Only the infrastructure mode for USER connection is compatible.

Limitations of use with software not installed

^{*2:} A USB cable is required for this connection.

^{*3:} PC audio can only be output from the projector in "Live mode".

However, it is necessary to install this software (driver) on the PC.

Audio cannot be output in "Multi-Live mode"/"Moderator Mode"/"Multiple unit live mode".

PT-FW300NT / PT-F300NT

Alphabet letters are omitted from the end of the above product numbers because the specifications are common regardless of whether the alphabet letters are included.

* Alphabet letters at end (place of destination: E/EA/U/(blank))

O: Possible X: Not possible

Function		Compatibility
	[SIMPLE] connection	×
	[S-DIRECT] connection/[M-DIRECT] connection	×
	[S-MAP] connection	0
Connection method/Control	[USER1] to [USER2] connection	0
	[1-4] connection	0
	[IP designation] connection	0
	[USB display] connection	×
	Live mode *1	0
	Multi-Live mode *1	0
	Moderator Mode *1	×
Compatible functions	Multiple unit live mode *1	0
	Browser remote control	×
	WEB control	0
	Content Manager	×

^{*1:} PC audio can only be output from the projector in "Live mode".

However, it is necessary to install this software (driver) on the PC.

Audio cannot be output in "Multi-Live mode"/"Moderator Mode"/"Multiple unit live mode".

Limitations of use with software not installed

PT-VW435N / PT-VX505N

Alphabet letters are omitted from the end of the above product numbers because the specifications are common regardless of whether the alphabet letters are included.

* Alphabet letters at end (place of destination: E/EA/U/(blank))

O: Possible X: Not possible

Function		Compatibility
	[SIMPLE] connection	×
	[S-DIRECT] connection/[M-DIRECT] connection	0
	[S-MAP] connection	0
Connection method/Control	[USER1] to [USER2] connection	0
	[1-4] connection	0
	[IP designation] connection	0
	[USB display] connection	O *1
	Live mode *2	0
	Multi-Live mode *2	0
	Moderator Mode *2	×
Compatible functions	Multiple unit live mode *2	0
	Browser remote control	×
	WEB control	0
	Content Manager	×

^{*1:} A USB cable is required for this connection.

Limitations of use with software not installed

^{*2:} PC audio can only be output from the projector in "Live mode".

However, it is necessary to install this software (driver) on the PC.

Audio cannot be output in "Multi-Live mode"/"Moderator Mode"/"Multiple unit live mode".

PT-VW345N / PT-VX415N

Alphabet letters are omitted from the end of the above product numbers because the specifications are common regardless of whether the alphabet letters are included.

* Alphabet letters at end (place of destination: Z/ZD/(blank))

O: Possible X: Not possible

Function		Compatibility
	[SIMPLE] connection	×
	[S-DIRECT] connection/[M-DIRECT] connection	0
	[S-MAP] connection	×
Connection method/Control	[USER1] to [USER2] connection	O *1
	[1-4] connection	X *1
	[IP designation] connection	0
	[USB display] connection	○ *2
	Live mode *3	0
	Multi-Live mode *3	0
	Moderator Mode *3	×
Compatible functions	Multiple unit live mode *3	0
	Browser remote control	×
	WEB control	0
	Content Manager	×

^{*1:} Only the infrastructure mode for USER connection is compatible.

Limitations of use with software not installed

^{*2:} A USB cable is required for this connection.

^{*3:} PC audio can only be output from the projector in "Live mode".

However, it is necessary to install this software (driver) on the PC.

Audio cannot be output in "Multi-Live mode"/"Moderator Mode"/"Multiple unit live mode".

PT-VX400NT

Alphabet letters are omitted from the end of the above product numbers because the specifications are common regardless of whether the alphabet letters are included.

* Alphabet letters at end (place of destination: E/EA/U/(blank))

O: Possible X: Not possible

Function		Compatibility
	[SIMPLE] connection	×
	[S-DIRECT] connection/[M-DIRECT] connection	×
	[S-MAP] connection	0
Connection method/Control	[USER1] to [USER2] connection	0
	[1-4] connection	0
	[IP designation] connection	0
	[USB display] connection	0
	Live mode *1	0
	Multi-Live mode *1	0
Compatible functions	Moderator Mode *1	×
	Multiple unit live mode *1	0
	Browser remote control	×
	WEB control	0
	Content Manager	×

^{*1:} PC audio can only be output from the projector in "Live mode".

However, it is necessary to install this software (driver) on the PC.

Audio cannot be output in "Multi-Live mode"/"Moderator Mode"/"Multiple unit live mode".

Limitations of use with software not installed

PT-LW80NT / PT-LB90NT / PT-LB80NT / PT-LB75NT

Alphabet letters are omitted from the end of the above product numbers because the specifications are common regardless of whether the alphabet letters are included.

* Alphabet letters at end (place of destination: E/EA/U/(blank))

O: Possible X: Not possible

Function		Compatibility
	[SIMPLE] connection	×
	[S-DIRECT] connection/[M-DIRECT] connection	×
	[S-MAP] connection	0
Connection method/Control	[USER1] to [USER2] connection	0
	[1-4] connection	0
	[IP designation] connection	0
	[USB display] connection	×
	Live mode *1	0
	Multi-Live mode *1	0
	Moderator Mode *1	×
Compatible functions	Multiple unit live mode *1	0
	Browser remote control	×
	WEB control	0
	Content Manager	×

^{*1:} PC audio can only be output from the projector in "Live mode".

However, it is necessary to install this software (driver) on the PC.

Audio cannot be output in "Multi-Live mode"/"Moderator Mode"/"Multiple unit live mode".

Limitations of use with software not installed

[•] Function that outputs audio together with images in Live Mode cannot be used.